



## PPE Face Shield Assembly

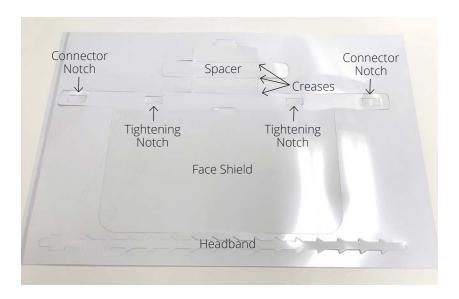


- 1. Peel off two parts on the carrier for each face shield
  - · Spacer & Shield
  - Headband





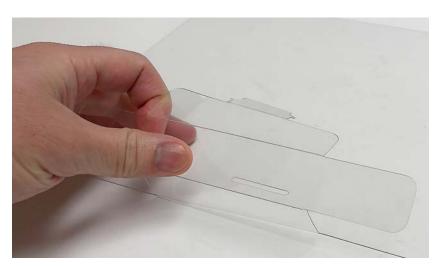

2. With the side of three creases facing up, fold along each crease 90 degrees upwards. To prevent breaking, do not bend the plastic back and forth

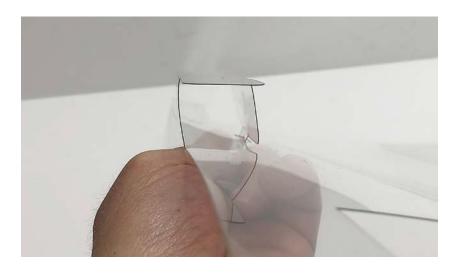


3. Form the spacer into a square tube, insert the locking tab through the slot to lock in place



Scan QR Code for Video Instructions




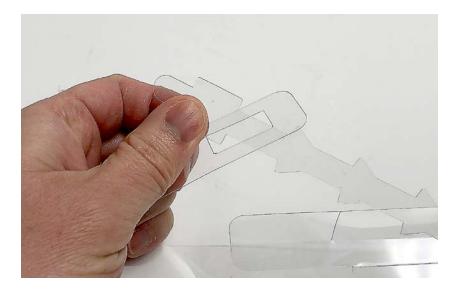

4. Insert the square end of Headband through left side of the connector notch




Scan QR Code for Video Instructions

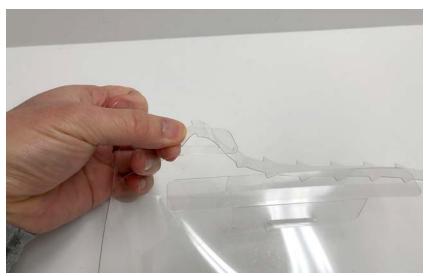

5. Bend the small tab downward and insert it through the other end of the notch to lock Headband in place, like below



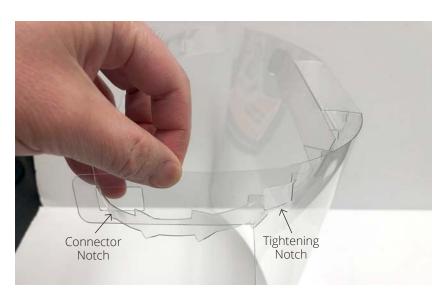

6. Loop the Headband and feed it through the connector notch on the other end, place the shield around your head, pull tight. Feed the excess band through one of the tightening notches to keep it taut